

Safety Wire and Cable Clip Installation Guide

Contents

Installing the Safety Wire and Cable Clip	5
Pro G7000W/G7100/G7200W/G7400U/G7500U/G7805/G7905U with ELPMB47 Mount	6
Pro G7000W/G7100/G7200W/G7400U/G7500U/G7805/G7905U with ELPMBPRH Mount.....	9
PowerLite Home Cinema 4000/4010/5040UB/5040UBe and Pro Cinema 4040/6040 with CHF4500 Mount	13
PowerLite Home Cinema 3100/3700/3710/3900 with CHF1000 Mount	16
Where to Get Help (U.S. and Canada)	19
Where to Get Help (Latin America).....	20
Trademarks	22
Copyright Attribution	23

Installing the Safety Wire and Cable Clip

When mounting your projector to the ceiling, you can install the optional safety wire and cable clip to help support the attachment of the projector to its mount.

See these sections to install the safety wire and cable clip to your projector and mount.

Note: Availability of products in this guide varies by country.

[Pro G7000W/G7100/G7200W/G7400U/G7500U/G7805/G7905U with ELPMB47 Mount](#)


[Pro G7000W/G7100/G7200W/G7400U/G7500U/G7805/G7905U with ELPMBPRH Mount](#)

[PowerLite Home Cinema 4000/4010/5040UB/5040UBe and Pro Cinema 4040/6040 with CHF4500 Mount](#)

[PowerLite Home Cinema 3100/3700/3710/3900 with CHF1000 Mount](#)

Pro G7000W/G7100/G7200W/G7400U/G7500U/G7805/G7905U with ELPMB47 Mount

You can attach two safety wires to your projector for increased safety as shown.

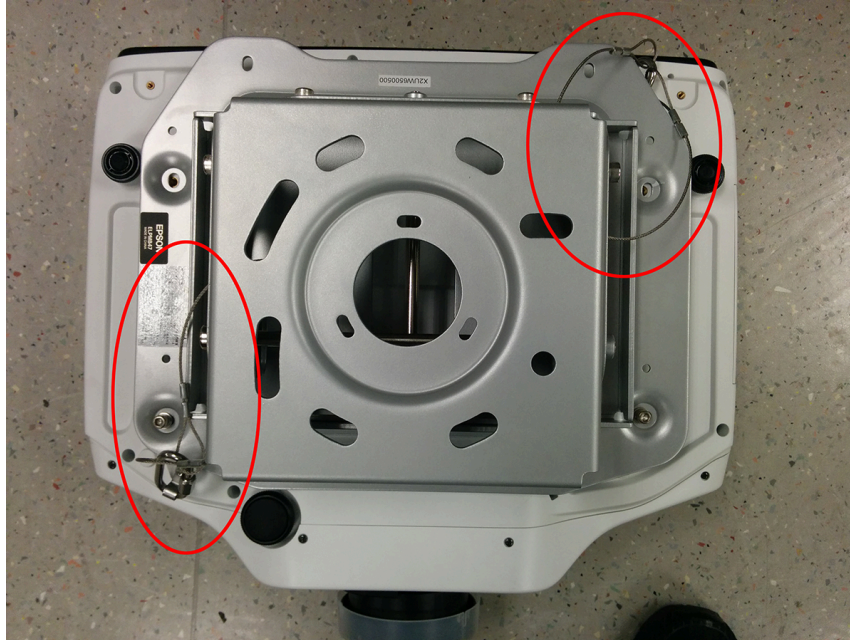


Before you start, make sure you have installed the ELPMB47 mount and have the following items:


- Safety wire × 2
- Carabiner × 2
- Cable clip × 1
- Pan head screw × 1

Note: If you are missing any of these items, contact Epson.

1. Attach a carabiner to the security bar near the back of the projector as shown.

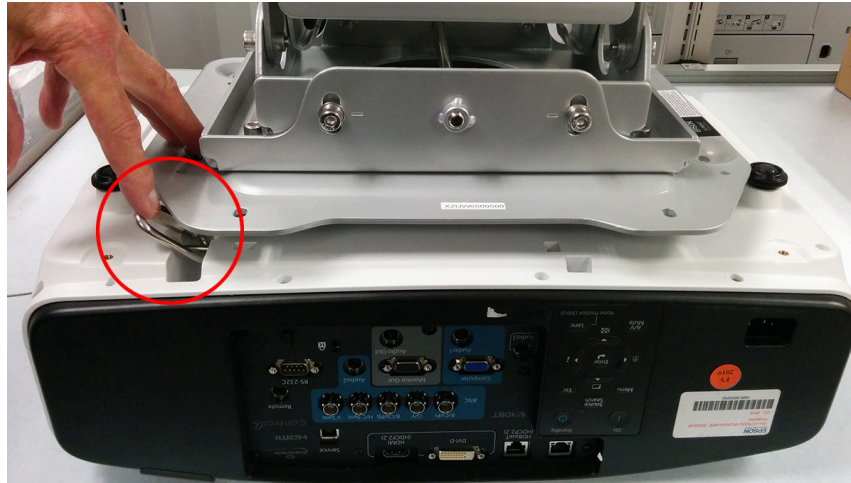


2. Loop the safety wire through the hole in the mount and attach both ends to the carabiner as shown.

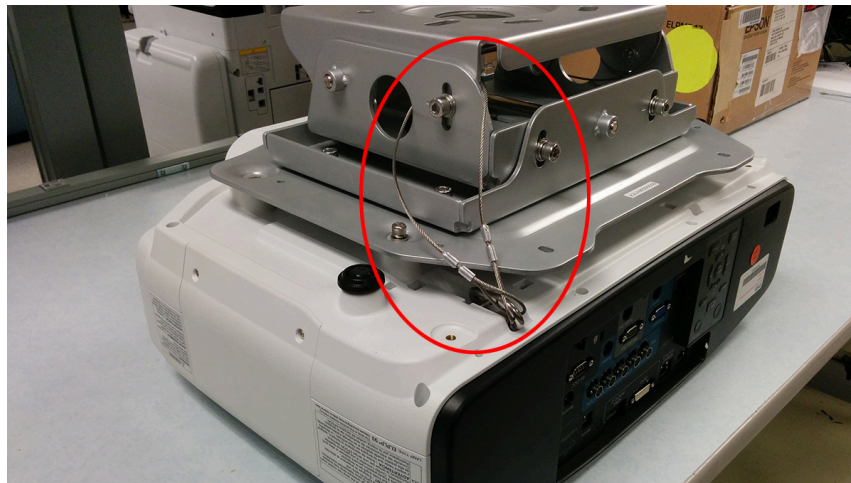

3. Tighten the carabiner lock.

4. Attach a carabiner to the cable clip. Then screw the cable clip and pan head screw into the mounting hole near the front of the projector as shown.

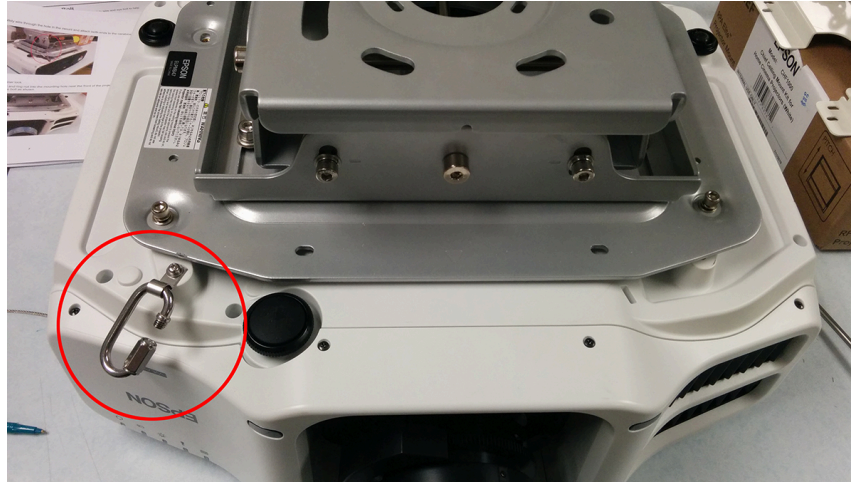

5. Loop the safety wire through the hole in the mount and attach both ends to the carabiner as shown.




6. Tighten the carabiner lock.

Parent topic: [Installing the Safety Wire and Cable Clip](#)

Pro G7000W/G7100/G7200W/G7400U/G7500U/G7805/G7905U with ELPMBPRH Mount

You can attach two safety wires to your projector for increased safety as shown.

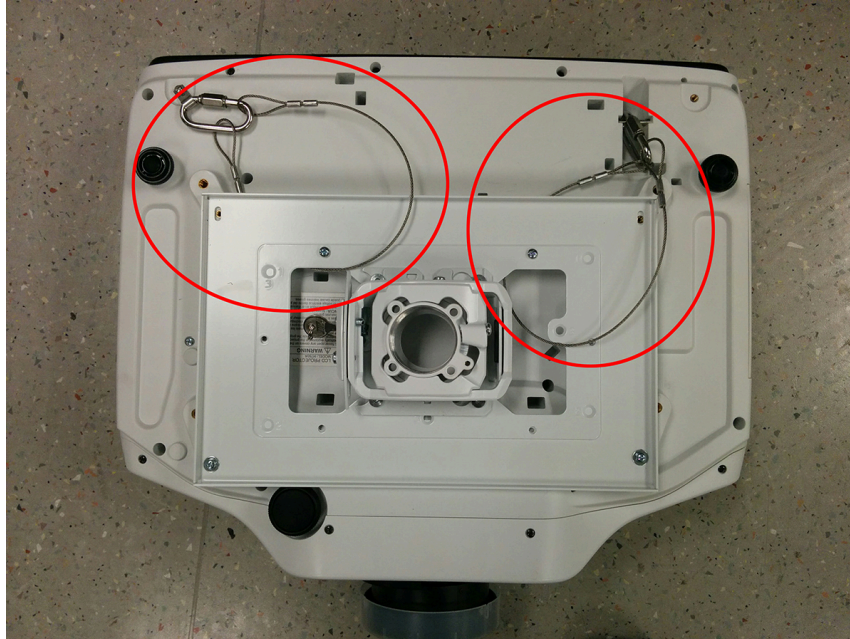


Before you start, make sure you have installed the ELPMBPRH mount and have the following items:


- Safety wire × 2
- Carabiner × 2
- Cable clip × 1
- Pan head screw × 1

Note: If you are missing any of these items, contact Epson.

1. Attach a carabiner to the security bar near the back of the projector as shown.

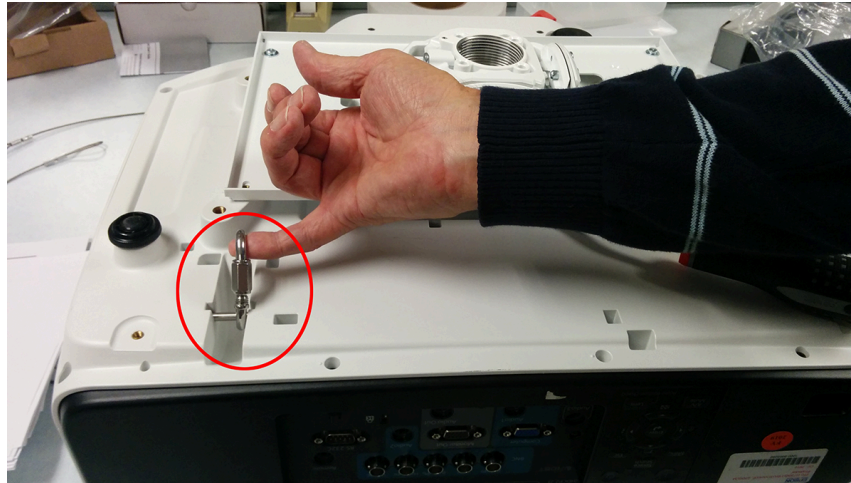

2. Loop the safety wire through the hole in the mount and attach both ends to the carabiner as shown.

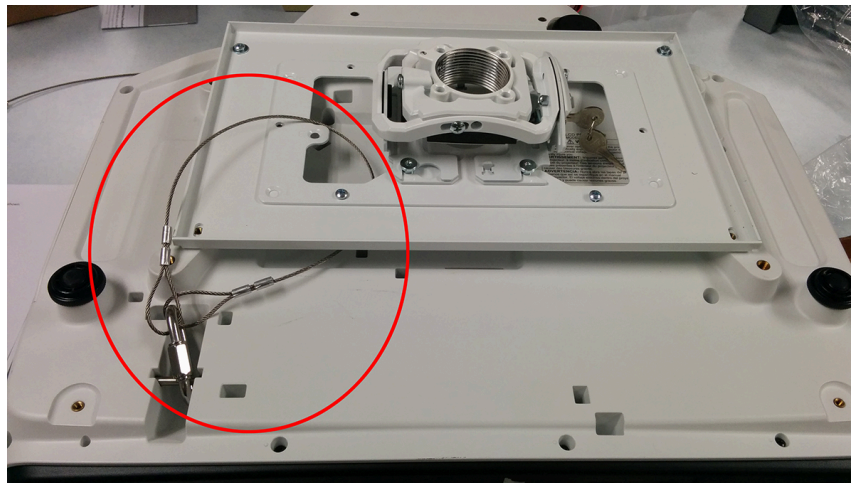


3. Tighten the carabiner lock.

4. Attach a carabiner to the cable clip. Then screw the cable clip and pan head screw into the mounting hole as shown.



5. Loop the safety wire through the hole in the mount and attach both ends to the carabiner as shown.

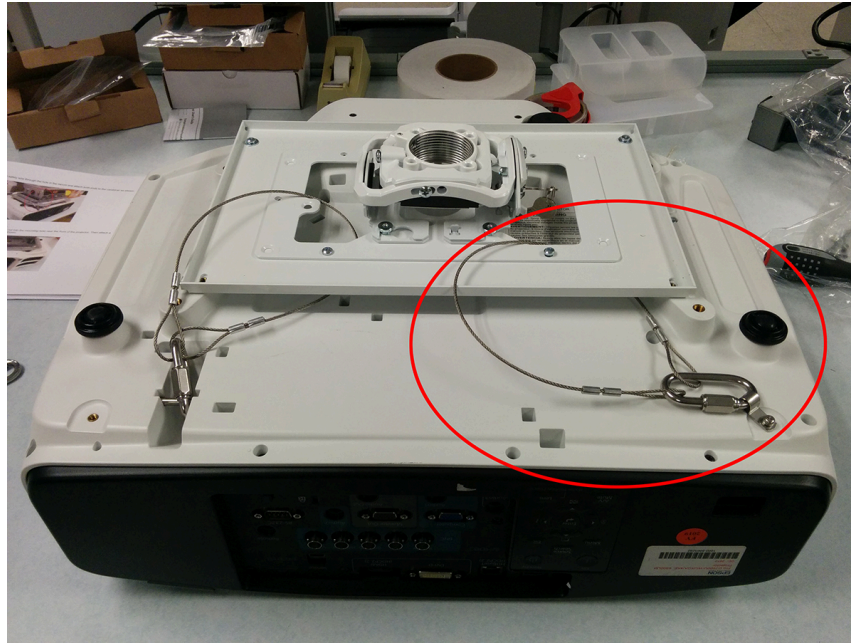


6. Tighten the carabiner lock.

Parent topic: [Installing the Safety Wire and Cable Clip](#)

PowerLite Home Cinema 4000/4010/5040UB/5040UBe and Pro Cinema 4040/6040 with CHF4500 Mount

You can attach two safety wires to your projector for increased safety as shown.

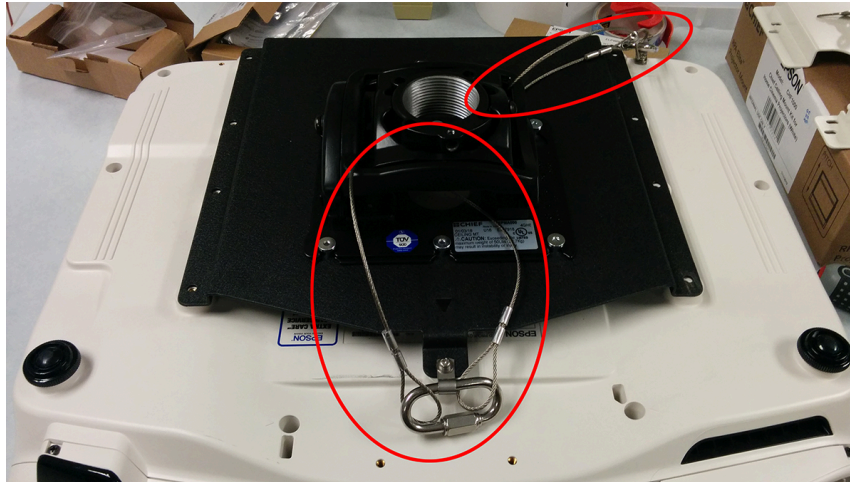


Before you start, make sure you have installed the CHF4500 mount and have the following items:


- Safety wire × 2
- Carabiner × 2
- Cable clip × 2
- Pan head screw × 2

Note: If you are missing any of these items, contact Epson.

1. Attach a carabiner to a cable clip. Then screw the cable clip and pan head screw into the mounting hole near the front of the projector as shown.

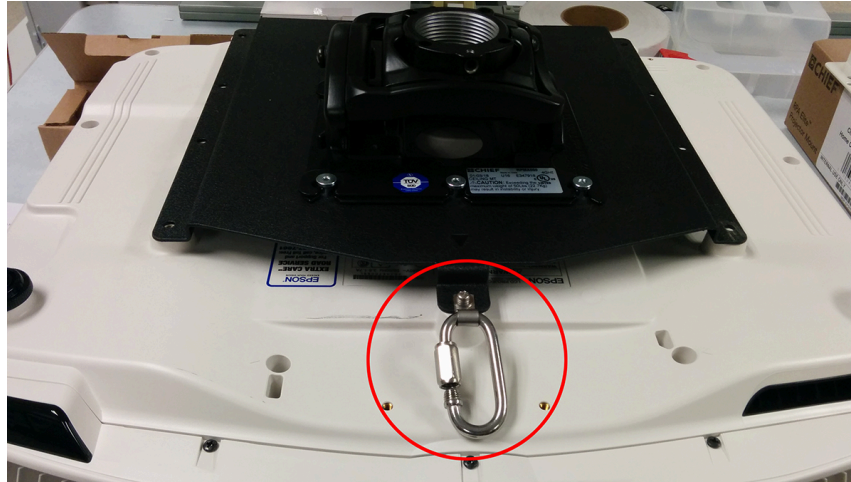

2. Loop the safety wire through the hole in the mount and attach both ends to the carabiner as shown.

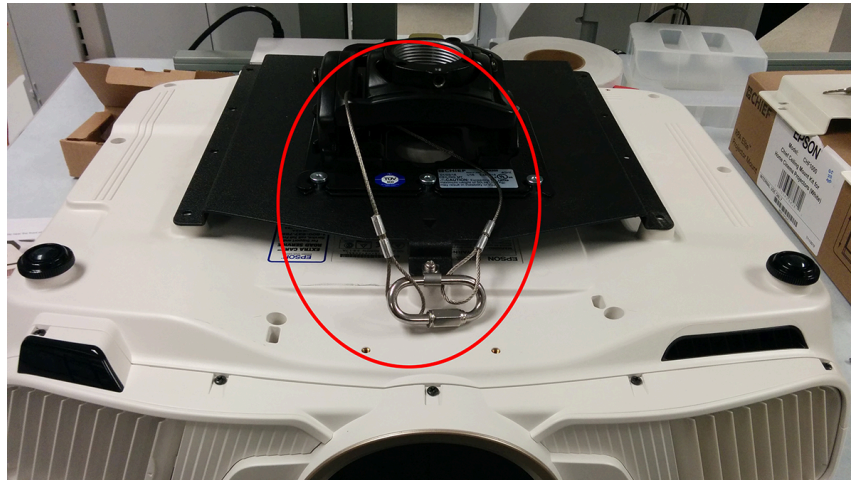


3. Tighten the carabiner lock.

4. Attach a carabiner to a cable clip. Then screw the cable clip and pan head screw into the mounting hole near the back of the projector as shown.



5. Loop the safety wire through the hole in the mount and attach both ends to the carabiner as shown.

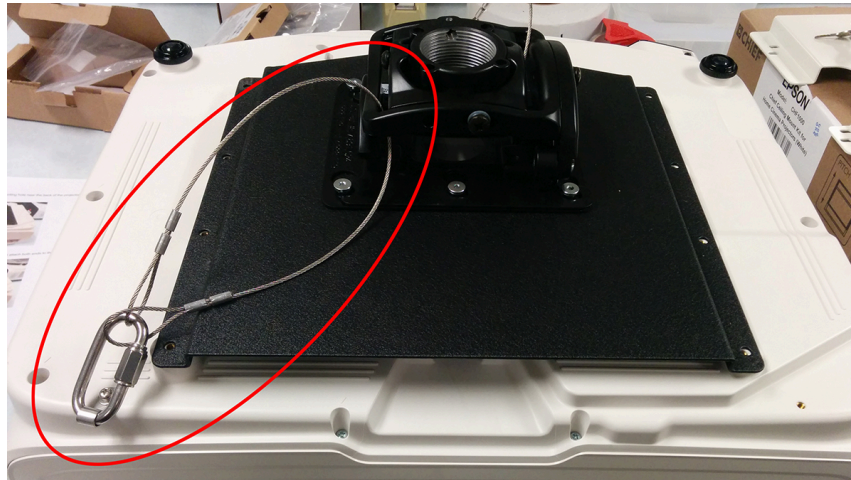


6. Tighten the carabiner lock.

Parent topic: [Installing the Safety Wire and Cable Clip](#)

PowerLite Home Cinema 3100/3700/3710/3900 with CHF1000 Mount

You can attach a safety wire to your projector for increased safety as shown.

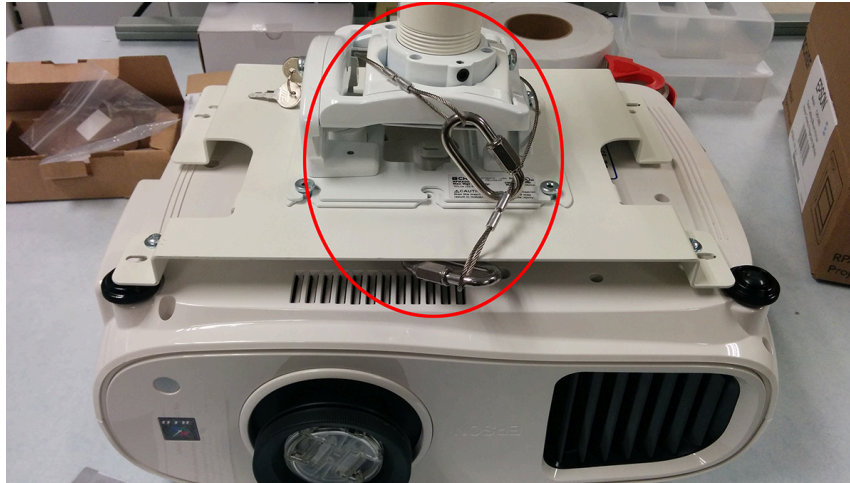


Before you start, make sure the CHF1000 mount is not installed and you have the following items:


- Safety wire × 1
- Carabiner × 2
- Cable clip × 1
- Pan head screw × 1

Note: If you are missing any of these items, contact Epson.

1. Attach a carabiner to the cable clip. Then screw the cable clip and pan head screw into the mounting hole near the front of the projector as shown.

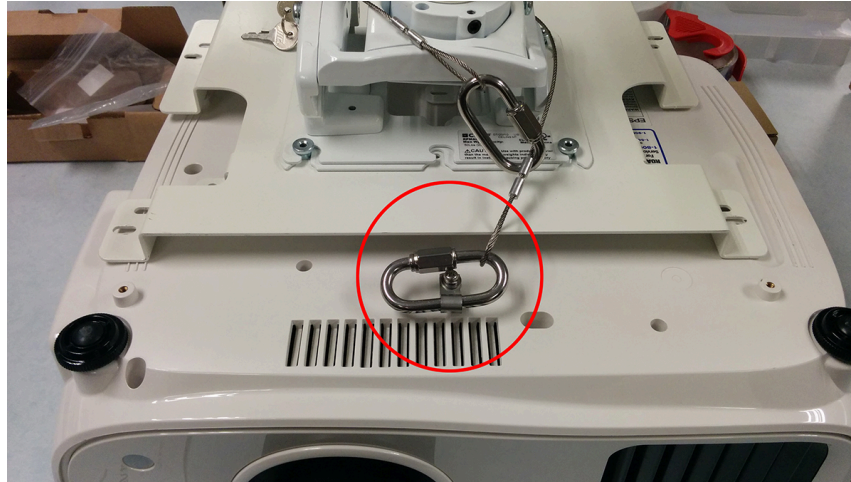

2. Loop the safety wire through the mount and a carabiner. Attach each end of the safety wire to a carabiner as shown.

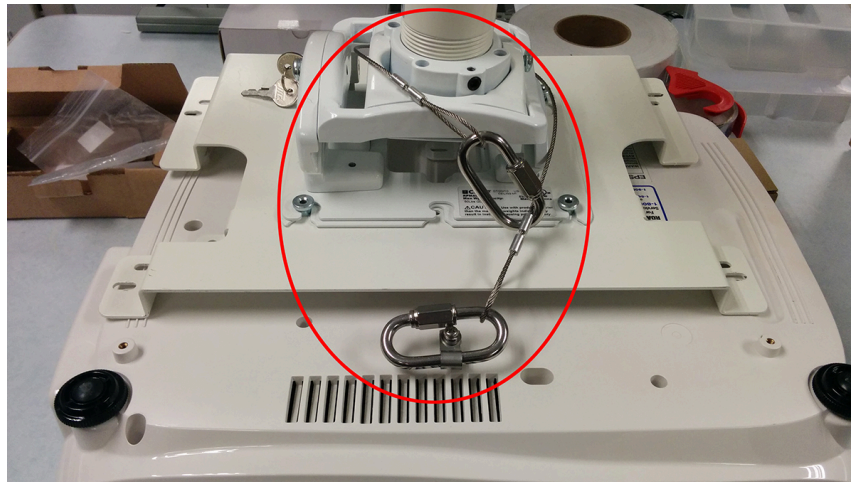

3. Tighten the carabiner locks.
4. Follow the instructions that came with the mount to install the mount.

Parent topic: [Installing the Safety Wire and Cable Clip](#)

Where to Get Help (U.S. and Canada)

If you need to contact Epson for technical support services, use the following support options.

Internet Support

Visit Epson's support website at epson.com/support (U.S.), epson.ca/support (Canada), or latin.epson.com/support (Caribbean) and select your product for solutions to common problems with your projector. You can download utilities and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

To use the Epson PrivateLine Support service, call (800) 637-7661. This service is available for the duration of your warranty period. You may also speak with a projector support specialist by dialing (562) 276-4394 (U.S.) or (905) 709-3839 (Canada).

Support hours are 6 AM to 8 PM, Pacific Time, Monday through Friday and 7 AM to 4 PM, Pacific Time, Saturday.

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Before you call, have the following information ready:

- Product name
- Product serial number (located on the bottom or rear of the projector, or in the menu system)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer or video configuration
- Description of the problem

Purchase Supplies and Accessories

You can purchase screens, other optional accessories, and replacement parts from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766) in the U.S. or 800-807-7766 in Canada. Or you can purchase online at epsonstore.com (U.S. sales) or epsonstore.ca (Canadian sales).

To purchase a replacement remote control, call (562) 276-4394 (U.S.) or (905) 709-3839 (for dealer referral in Canada).

Where to Get Help (Latin America)

If you need to contact Epson for technical support services, use the following support options.

Internet Support

Visit Epson's support website at latin.epson.com/support and select your product for solutions to common problems. You can download utilities and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

Before you call for support, please have the following information ready:

- Product name
- Product serial number (located on the bottom or rear of the projector, or in menu system)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer or video configuration
- Description of the problem

Then call:

Country	Telephone
Argentina	(54 11) 5167-0300 0800-288-37766
Bolivia*	800-100-116
Brazil	0800-007-5000
Chile	(56 2) 2484-3400
Colombia	Bogota: (57 1) 592-2200 Other cities: 018000-915235
Costa Rica	800-377-6627
Dominican Republic*	1-888-760-0068
Ecuador*	1-800-000-044
El Salvador*	800-6570

Country	Telephone
Guatemala*	1-800-835-0358
Mexico	Mexico City: (52 55) 1323-2052 Other cities: 01-800-087-1080
Nicaragua*	00-1-800-226-0368
Panama*	00-800-052-1376
Paraguay	009-800-521-0019
Peru	Lima: (51 1) 418-0210 Other cities: 0800-10-126
Uruguay	00040-5210067
Venezuela	(58 212) 240-1111

* Contact your local phone company to call this toll-free number from a mobile phone.

Note: Toll or long distance charges may apply. If your country does not appear on the list, contact the sales office in the nearest country.

Purchase Supplies and Accessories

You can purchase optional accessories and replacement parts from an Epson authorized reseller. To find the nearest reseller, go to epson.com.jm. Or you can contact your nearest sales office as described in "Where to Get Help".

Trademarks

EPSON® and PowerLite® are registered trademarks and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

PrivateLine® is a registered trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.



Copyright Attribution

© 2020 Epson America, Inc.

10/20

CPD-57773R2