


CHIAYO

Operation manual


SQ-5100 IrDA

UHF Handheld Microphone

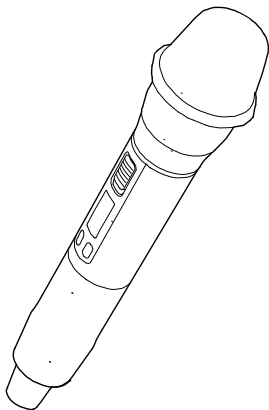


CHIAYO ELECTRONICS CO.,LTD.

Parts and functions

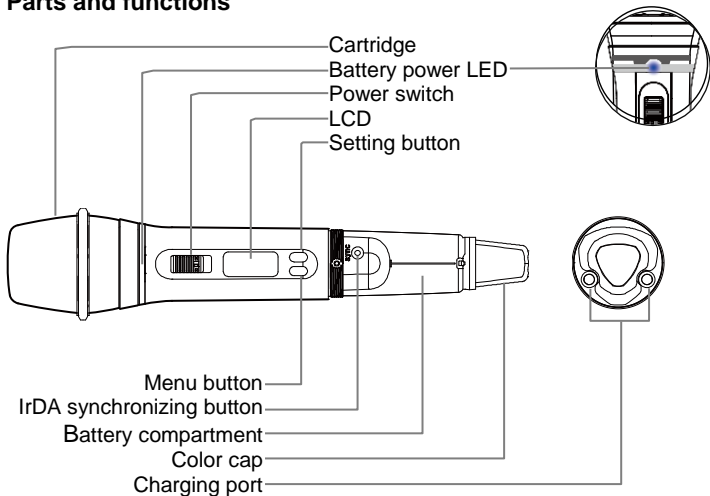


3-STEP power switch

To prevent other user from turning off the power, you may slide this switch to the right to lock the microphone on stand-by or mute status. Slide to the left to unlock.


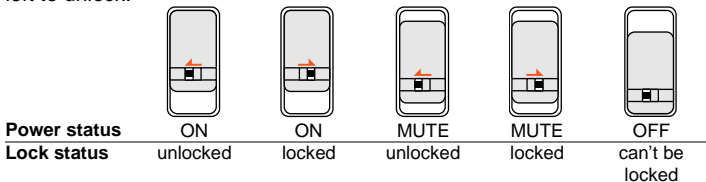


Battery installation & indicator

When the transmitter is switched ON, a blue LED will blink once to denote the batteries installed are in good condition.

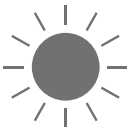

  If the LED remains illuminated, it means the batteries are weak and require replacement.




This transmitter requires 2 x AA batteries to operate.

To install, remove the battery cover and slide the batteries into the battery compartment & replace the battery cover.


Note: Batteries contain a corrosive acid that may leak and damage the transmitter when stored for a long period. Batteries should be removed from the transmitter before storing without use for more than 4 weeks.

Channel setting


- 1 Use **MENU** button to go to the CHANNEL | FREQUENCY page.

 

 -
- 2 Press and hold the **SET** button for 3 seconds, then the upper-right channel number will flash to allow changes to be made.




 -
- 3 Press **SET / MENU** buttons to change the channel number. The corresponding frequency will change accordingly.



-
- 4 3 seconds after selecting a channel, it will be automatically saved.

 Channel synchronizing of the receiver and transmitter




Align infrared areas of the receiver and transmitter within 30cm.

Changing the receiver's channel

STEP 1 Press the synchronizing button of the transmitter.

 
STEP 2 The transmitter's LED will glow to denote transmitting the frequency to the receiver and synchronizing the channels.



Changing the transmitter's channel

STEP 1 Press the synchronizing button of the receiver and the receiver will transmit the frequency to the transmitter and synchronize the channels

 STEP 2 The transmitter's LED will glow to denote its channel synchronized by the receiver.




If it doesn't work check that you have the IR sensor panels aligned, that they are facing each other, devices are within 30cm of each other, and try again.

Battery type setting


- 1** Use **MENU** button to go to the BATTERY TYPE page.



 -
- 2** Press and hold **SET** button for 3 seconds, then the cursor ← will flash to allow changes to be made.



 -
- 3** Press **SET** button to select either **NIMH** (rechargeable battery) or **AKLN** (alkaline battery).



-
- 4** 3 seconds after selecting a battery type, it will be automatically saved.

Gain setting

This transmitter has an RF GAIN sensitivity switch. For close mouth singing or normal speech, please select a lower level (L:01 or L:02). For tripod-mount speech, please select a higher level (L:03 or L:04).

- 1** Use **MENU** button to go to the RF GAIN page.



L:01
RFGAIN

- 2** Press and hold **SET** button for 3 seconds, the upper-left letters "L:" will flash to allow changes to be made.



L:01
RFGAIN

- 3** Press **SET / MENU** buttons to change the gain level between L:01 and L:04.



L:04
RFGAIN

- 4** 3 seconds after selecting a gain level, it will be automatically saved.



www.chiayo.com.tw

CHIAYO ELECTRONICS CO.,LTD.

Http://www.chiayo.com.tw | Email: sales@chiayo.com.tw

Office: 30, Lane 27, Section 4, Jen-Ai Road, Taipei 10685, Taiwan

Tel: 886-2-27415741 | Fax: 886-2-27525242

Factory: 88, Chung-Hsiao Street 2, Chiayi 60080, Taiwan

Tel: 886-5-2711000 | Fax: 886-5-5767611